Venture GPSTM INSTALLATION GUIDE

STEP 1: Mount the Antenna

WARNING The GPS antenna cords are two small coaxial cables that should never be pinched or kinked. A bad kink or pinch in the cables can cause the vehicle unit to not find satellite signal.

ROOF MOUNTING

- 1. Attach the whip to the antenna. Then place the antenna on the roof of the vehicle for best satellite reception.
- 2. Route the cords underneath the passenger side door seal and down the door jamb.
- 3. Route the cords under the dash to the future mounting position for the VEHICLE UNIT.

HOOD MOUNTING

- 1. Place the antenna on the hood or the metal filler panel between the windshield and hood.
- 2. Route the cords into the engine compartment and through an existing cable hole in the firewall.
- 3. Route the cords under the dash to the future mounting position for the VEHICLE UNIT.

STEP 2: Mount the Vehicle Unit

- 1. Mount the vehicle unit in a suitable place under the dash using the provided fasteners or zip ties.
- 2. Screw the antenna leads to the Unit.

STEP 3: Wire the Vehicle

ACCESS YOUR VEHICLE'S IGNITION HARNESS

Use a 12 volt test light or volt meter to find 12 volt CONSTANT power source.

PREPARE THE HARNESS

- 1. Connect one fuse holder to the RED wire with a splice connector.
- 2. Connect the ground ring to the BLACK wire.

VEHICLES WITH LARGE WIRES

- 1. For 10 gauge or larger wires, connect a scotch lock to the power source wire that you found in the vehicle's harness.
- 2. Slide the unstripped fuse end into the open hole in the scotch lock and crimp the metal down with a large pair of pliers.
- 3. Fold over the plastic cover on the scotch lock and the connection is completed.
- 4. Ground the GPS wiring harness to the firewall or suitable metal grounding sourc with the self tapping screw and ring connector provided.

VEHICLES WITH SMALL WIRES

- 1. Connect a T-Tap to the power source wire that you found in the vehicle's harness.
- 2. Attach a male spade connector to the fuse of the RED wire.
- 3. Connect the RED wire to the constant battery source.
- 4. Connect the BLACK wire to the firewall with the self tapping screw or connect it to an existing ground wire.



Phone: 407-888-9663 Fax: 407-855-4344

©2003 All Rights Reserved

